



Table of Contents

CHAPTER 7	COLOR TABLE	1
	Color Table	1
WORKFLOW 1:	ATTACHING CFLHD COLOR TABLE	1
WORKFLOW 2:	ATTACHING THE COLOR TABLE PERMANENTLY	3



Chapter 7 Color Table

Color Table

The current color table in use at CFLHD is: **cflhd_cfl.tbl**. This file can be found on the CFLHD network at:

N:\Standards\MicroStation\v8\Nounits\color, or on the CFLHD web site at:

http://www.cflhd.gov/cadd/standard_files/color_table_cfl.zip

Workflow 1: Attaching CFLHD Color Table

1. *From MicroStation select Settings>Color Table...*

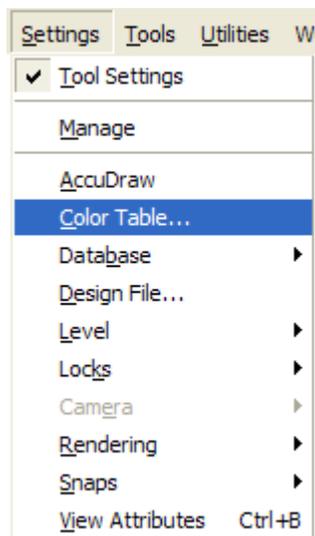


Figure 7-1: Settings Menu

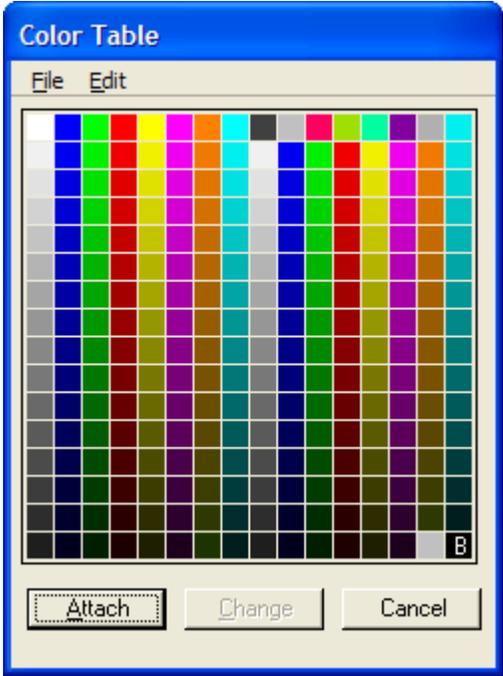


Figure 7-2: Default Color Table

2. This will open the current color table, usually the MicroStation default color table, shown in Figure 7-2. From the color table palette, select File>Open..., and then select the CFLHD color table to be attached.

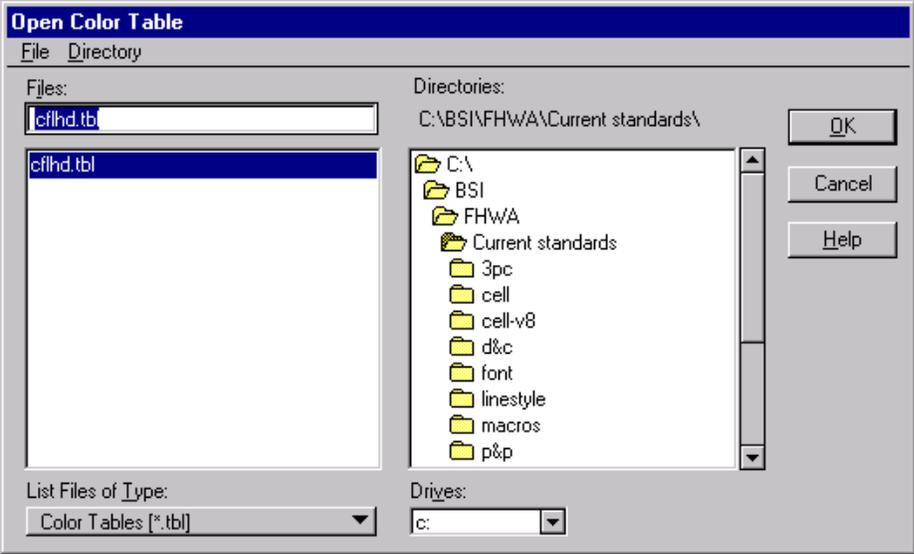


Figure 7-3: Open Color Table

3. Click OK and the CFLHD color table will now be shown.

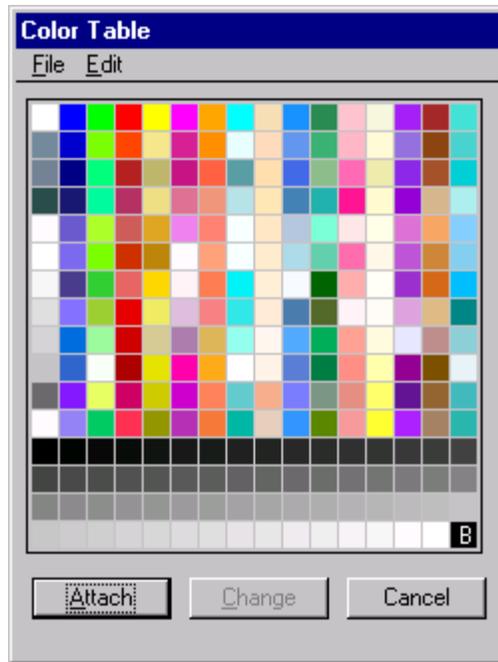


Figure 7-4: CFLHD Color Table

4. When the correct color table, *cfld.tbl*, is displayed, click on the attach button. The correct color table will now be attached to this drawing.



A color table may be attached at the user configuration level so that the correct color table will be attached every time a user opens MicroStation. If the correct color table is not displaying, contact CADD support to have this setup, or follow the workflow below.

Workflow 2: Attaching the Color Table Permanently

1. To attach the correct color table more permanently, select *Workspace>Configuration...* from the main MicroStation pull-down.

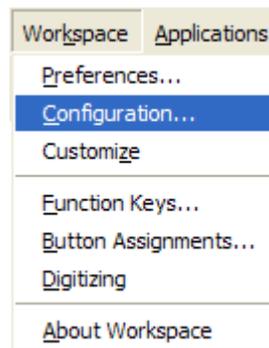


Figure 7-5: Workspace Menu



2. From the workspace configuration dialog box, select colors.

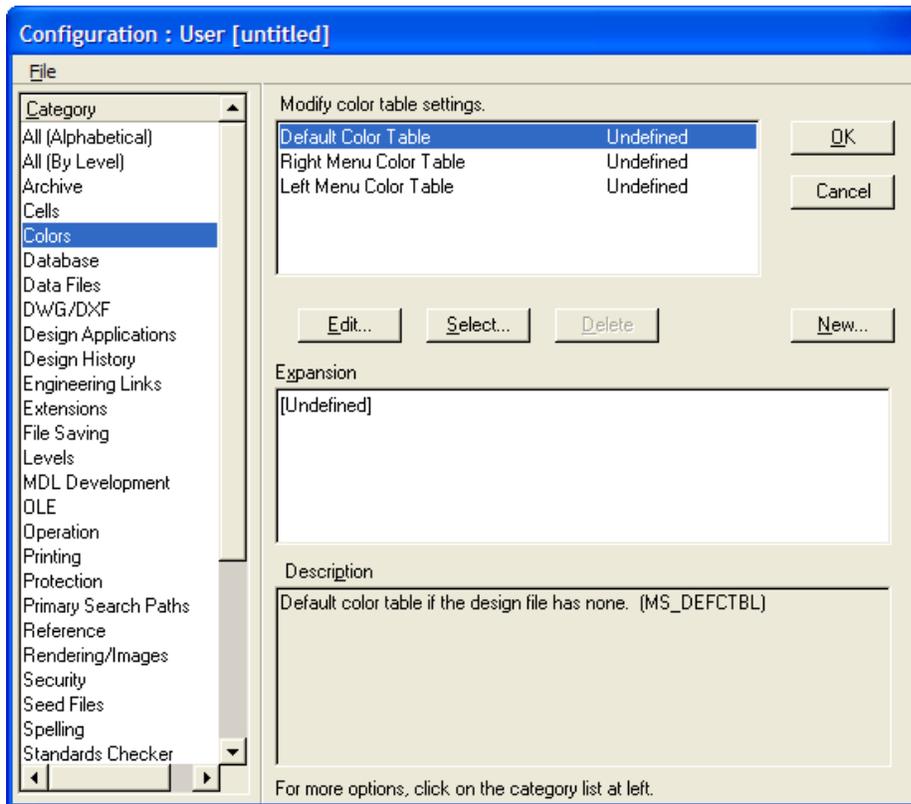


Figure 7-6: User Configuration

3. Highlight Default Color Table from the upper right window on the palette. Click on the select button and select the correct color table, cflhd.tbl. Once selected, click the OK button. This will prompt an alert from MicroStation, asking if you really want to save changes to your .ucf file (user configuration file).

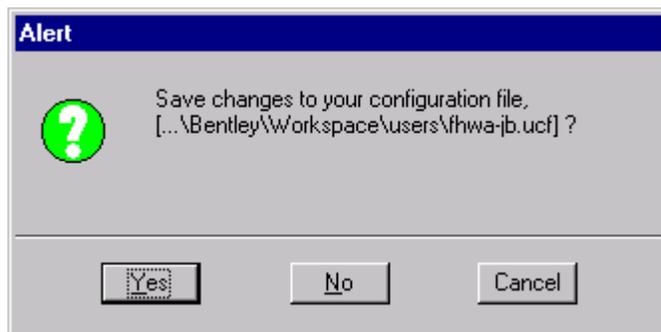


Figure 7-7: Alert Dialog Box

4. Choose Yes and the color table will be attached each time MicroStation is launched. For all configuration changes, exit MicroStation and re-enter for the changes to take affect