



Workflow 2: Attaching the Color Table Permanently

1. To attach the correct color table more permanently, select *Workspace>Configuration...* from the main *MicroStation* pulldown.

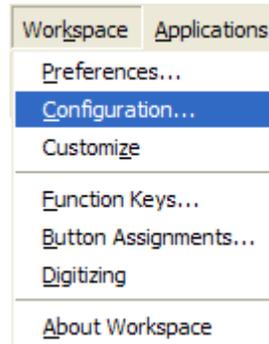


Figure 7-5: Workspace Menu

2. From the workspace configuration dialog box, select colors.

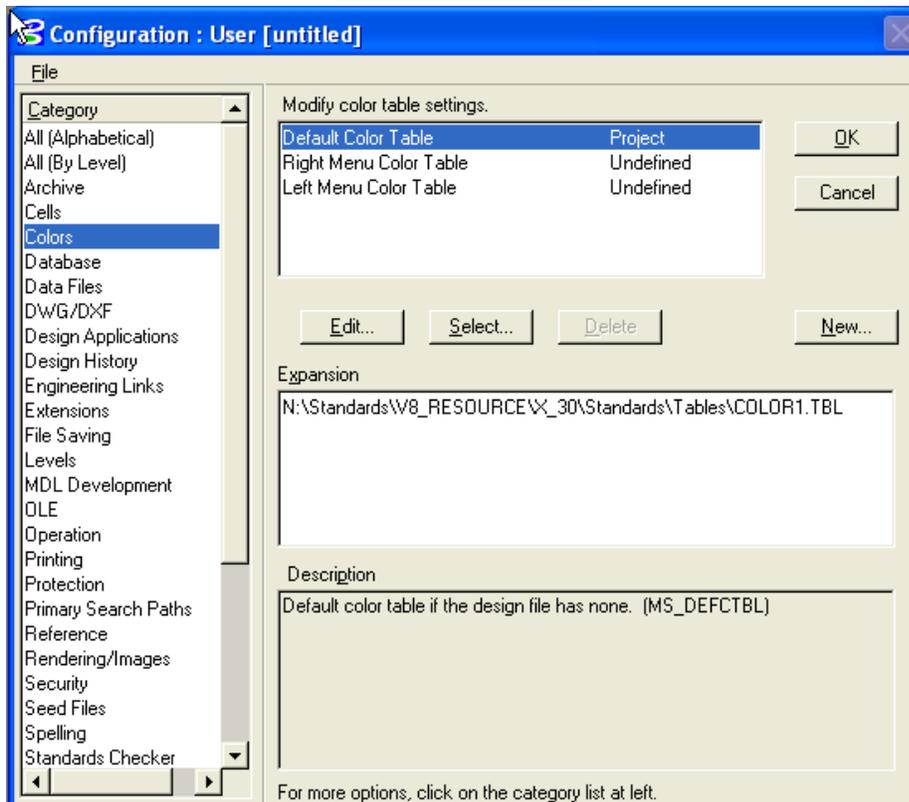


Figure 7-6: User Configuration

3. Highlight *Default Color Table* from the upper right window on the palette. Click on the *select* button and select the correct color table, *color1.tbl*. Once selected, click the *OK* button. This will prompt an alert from *MicroStation*, asking if you really want to save changes to your *.ucf* file (user configuration file).

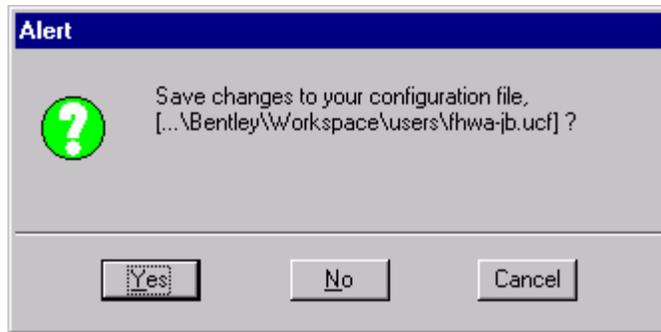


Figure 7-7: Alert Dialog Box

4. *Choose Yes and the color table will be attached each time MicroStation is launched. For all configuration changes, exit MicroStation and re-enter for the changes to take affect.*



Workflow 2 - Attaching the Color Table Permanently is for information only. CFLHD designers should not manually attach or edit configuration variables. For CFLHD, the CADD Coordinator sets the configuration variables.